



How to update QuadPIC Standalone Production programmer firmware

1. Connect QuadPIC Standalone Production Programmer to USB. Open MPLAB IDE. Go to programmer and select PICKit3. You will see below message on your output window.

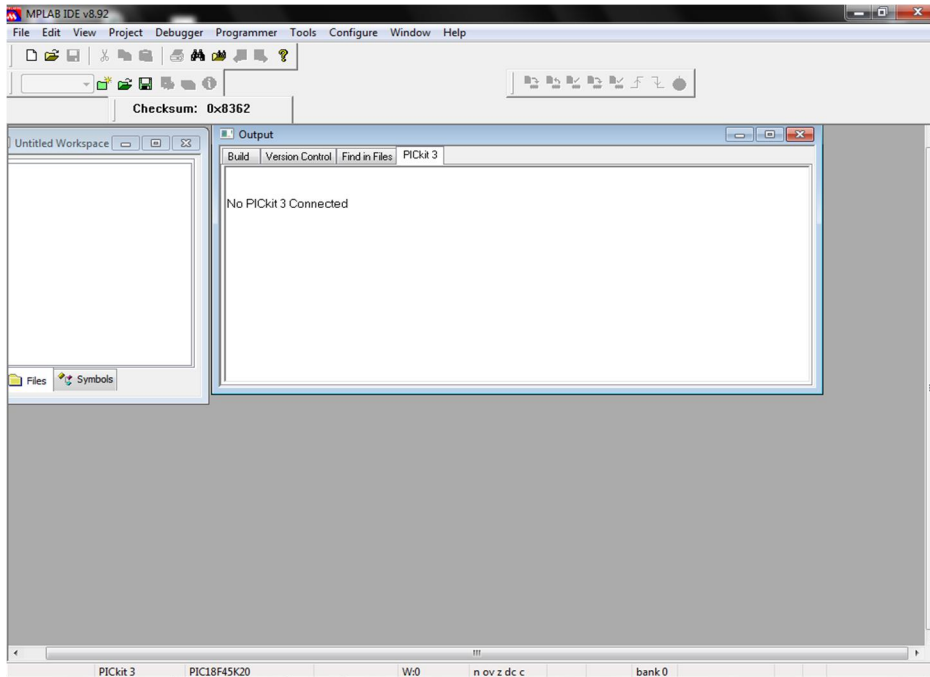


2. Now press red button on QuadPIC programmer. You will get below message after pressing the red button.

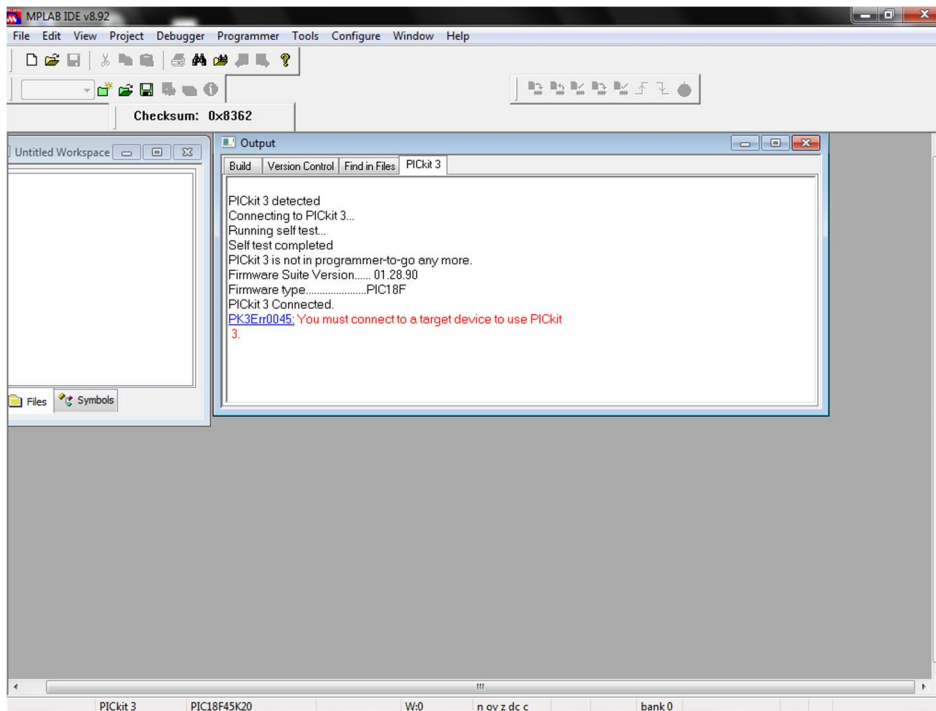


How to update QuadPIC Standalone Production programmer firmware

3. Now go to programmer->> settings

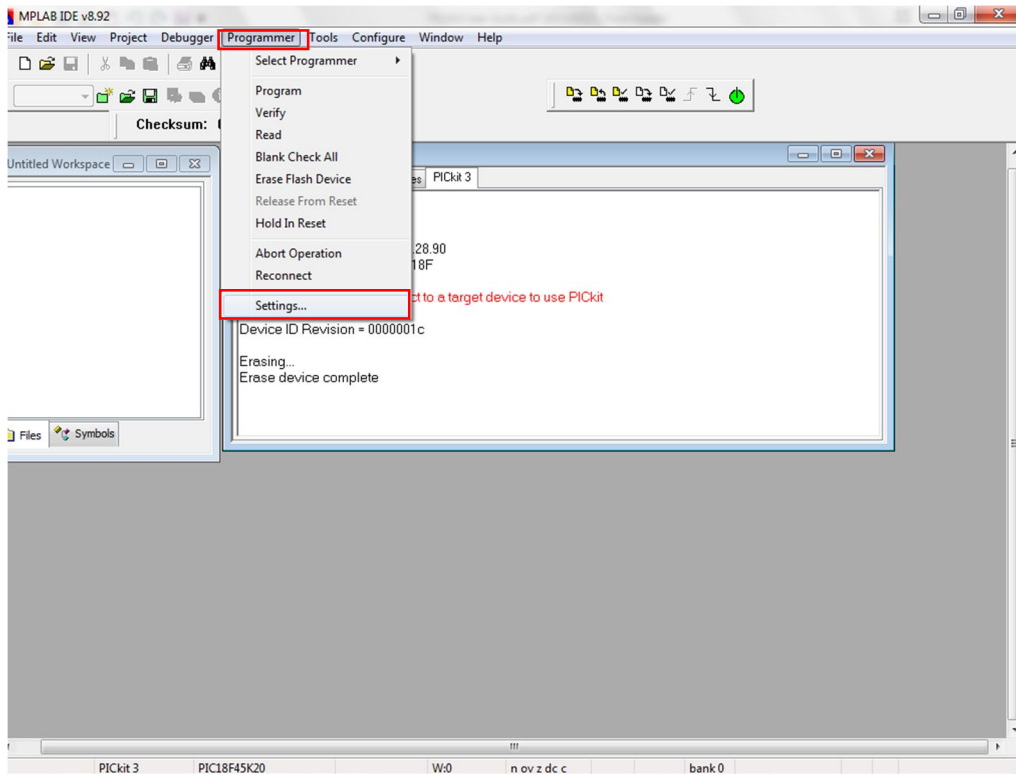


4. Go to Programmer ->> settings ->> configuration and click on manual download. Don't click on auto download latest firmware.

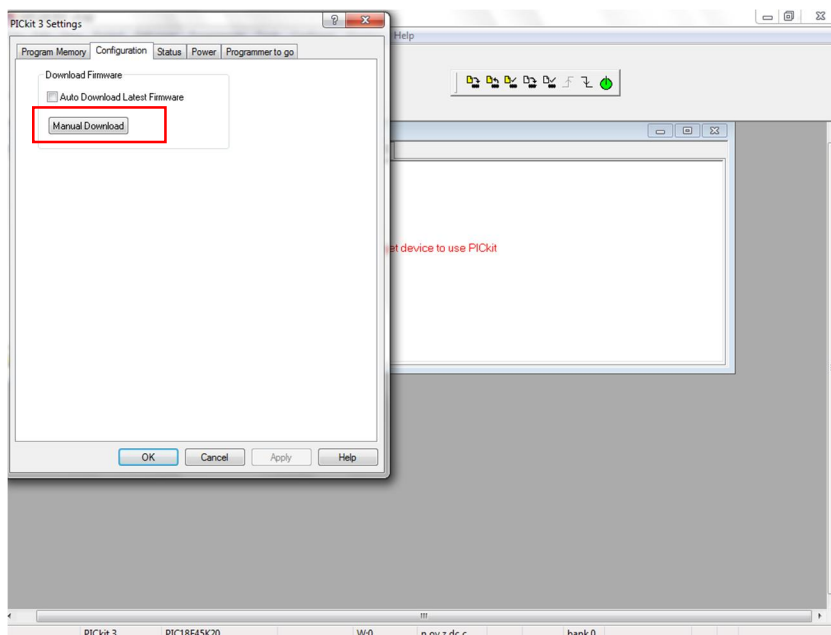


How to update QuadPIC Standalone Production programmer firmware

5. After clicking on manual download you will get window below. Click on .jam file and click on open.

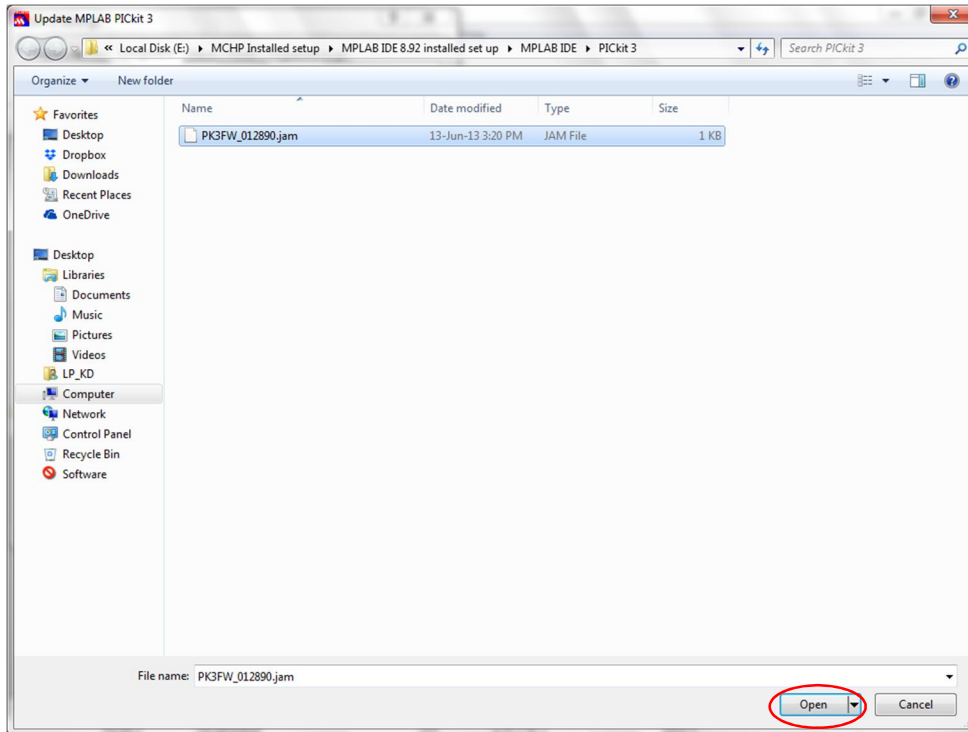


6. After clicking on .jam file you will get following window in your output.

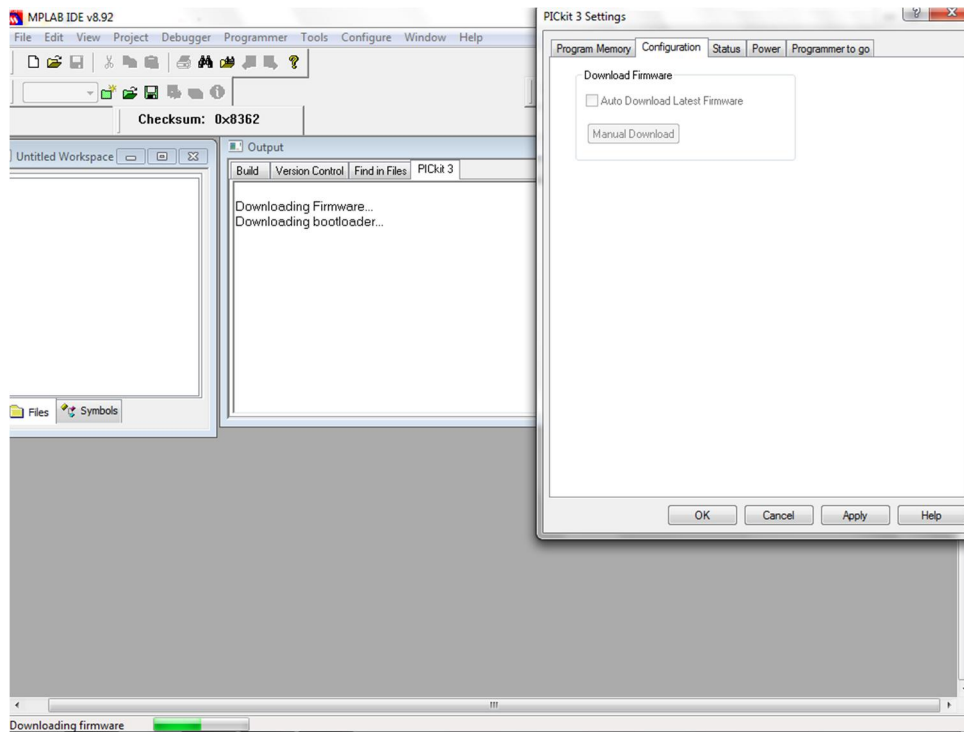


How to update QuadPIC Standalone Production programmer firmware

7. After Rs download complete click red button on QuadPIC.

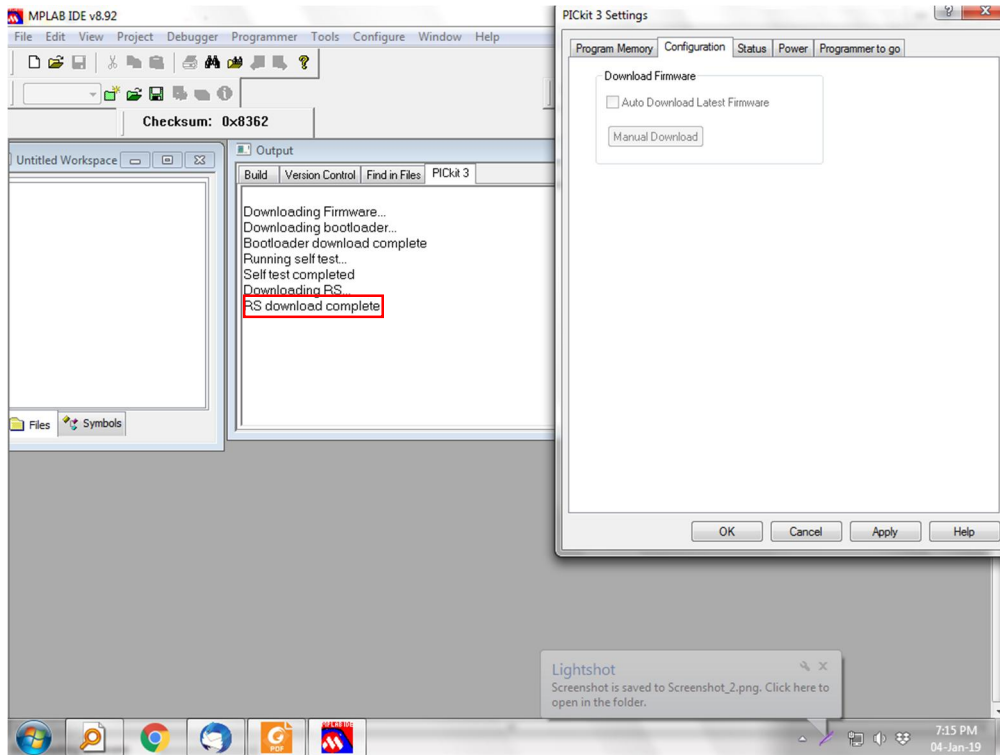


8. After AP download complete click red button on QuadPIC.

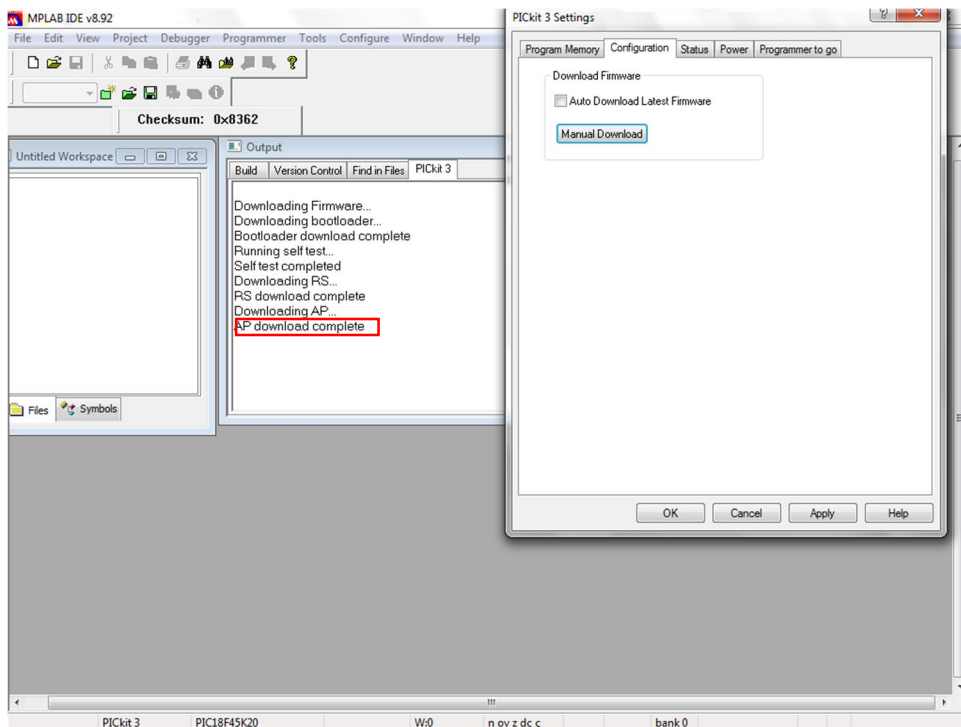

How to update QuadPIC Standalone Production programmer firmware

9. You will get the following output.

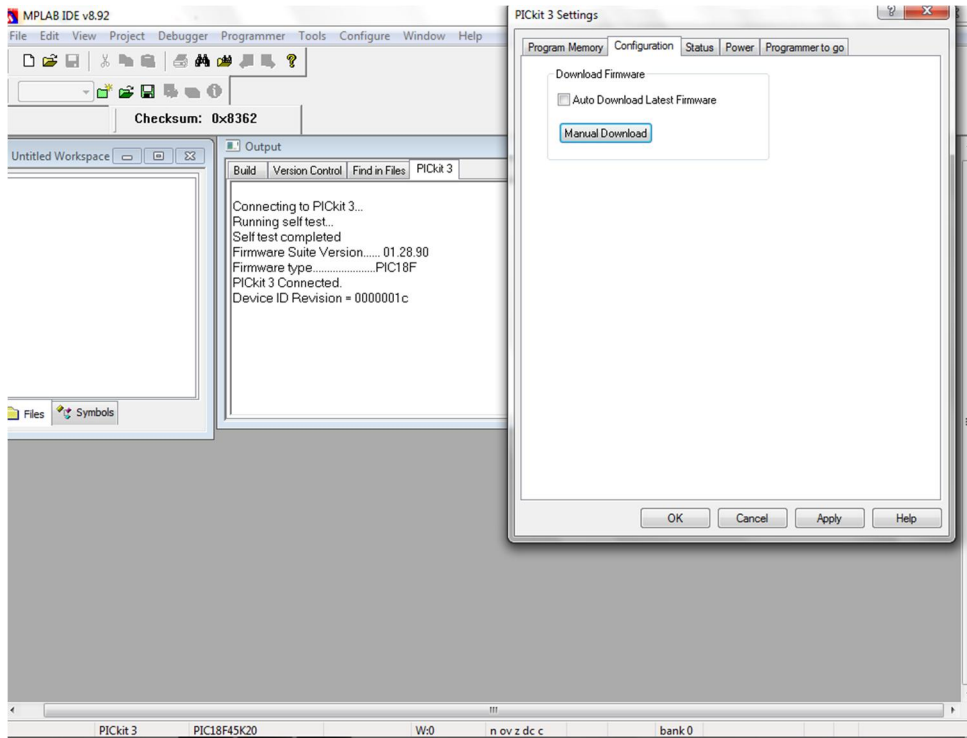

10. After all the steps click on apply and ok.

